


جزوه آموزشی سیستم برق خودروی Arrizo5





مدیریت فنی و مهندسی
اداره آموزش
کد : EL-85-01
ویرایش اول

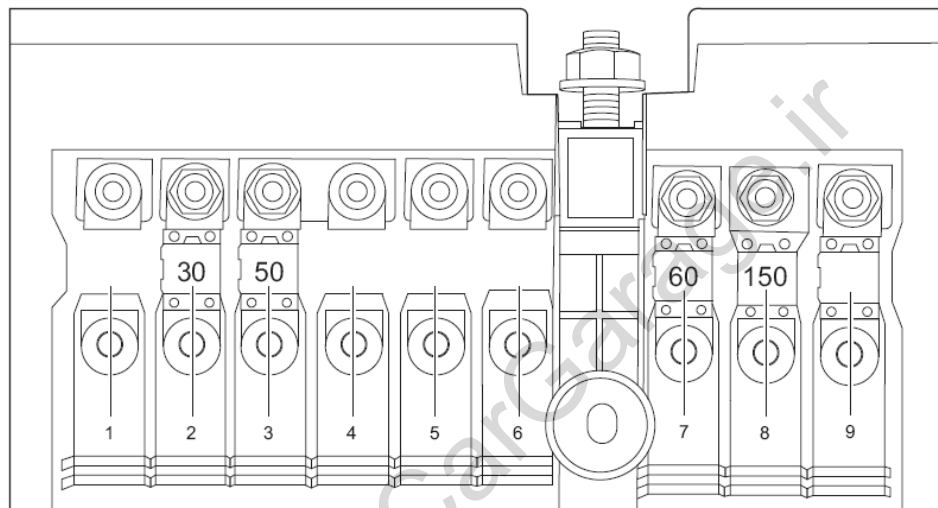

EM1A060010

Power Fuse Description



No.	Fuse	Description	No.	Fuse	Description
1	FB01	-	6	FB06	-
2	FB02	Instrument Panel Fuse and Relay Box	7	FB07	EPS (Reserve)
3	FB03	BCM	8	FB08	Alternator
4	FB04	-	9	FB09	-
5	FB05	-			

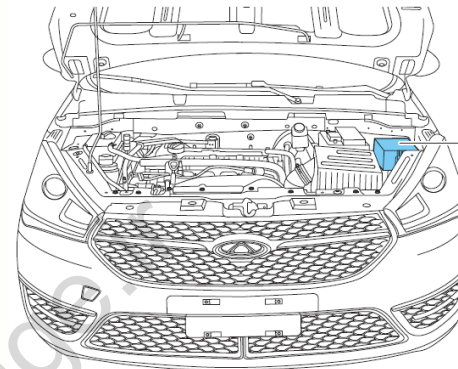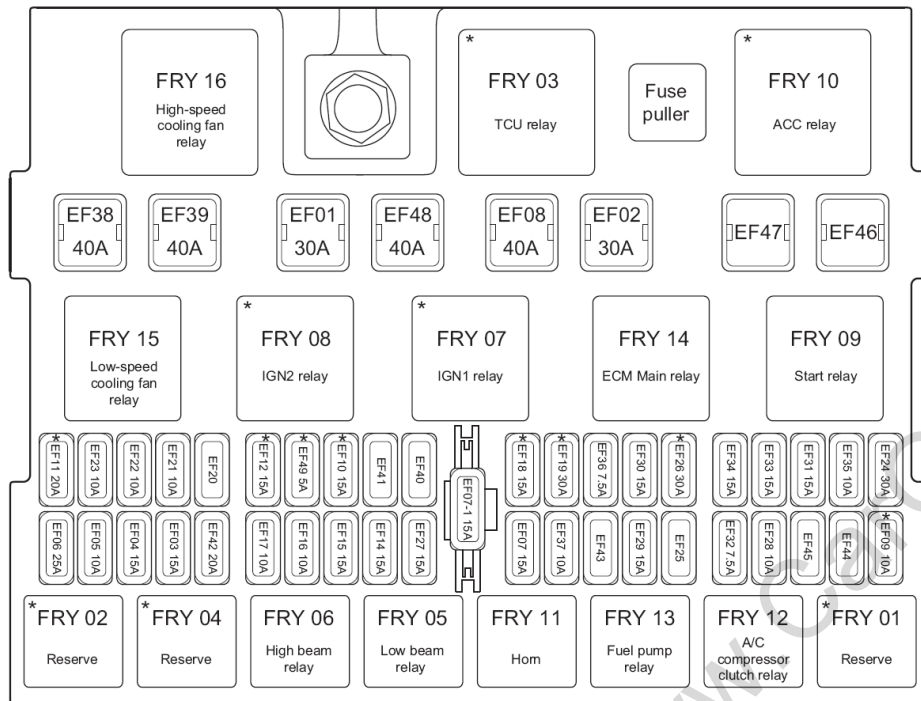


Engine Compartment Fuse and Relay Box


*: If equipped

No.	Description	No.	Description	No.	Description
FB01	Spare	EF12	Front fog light	EF32	Upstream oxygen sensor
FB02	IP box	EF13	-	EF33	Injector
FB03	BCM	EF14	Low beam RH	EF34	Engine sensor
FB04	Spare	EF15	Low beam LH	EF35	Reserve
FB05	Reserve	EF16	High beam RH	EF36	Downstream oxygen sensor
FB06	Spare	EF17	High beam LH	EF37	ECM
FB07	Reserve	EF18	PEPS	EF38	Low-speed cooling fan
FB08	Generator	EF19	IP box (IGN)	EF39	High-speed cooling fan
FB09	Spare	EF20	Spare	EF40	Spare
EF01	Ignition switch	EF21	Brake switch	EF41	Spare
EF02	Blower	EF22	Back-up light	EF42	Sliding roof motor
EF03	Immobilizer/Brake light	EF23	Radar/AC pressure switch/Sunroof switch	EF43	Spare
EF04	Ignition switch	EF24	Starter	EF44	Spare
EF05	TCU (CVT model)/PEPS	EF25	Spare	EF45	Spare
EF06	ABS valve	EF26	IP box (ACC)	EF46	Spare
EF07	IP box (B+)	EF27	Horn	EF47	Spare
EF08	ABS pump	EF28	A/C compressor clutch	EF48	Reserve
EF09	Reserve	EF29	Fuel pump	EF49	Spare
EF10	Reserve	EF30	ECM		
EF11	TCU (CVT model)	EF31	Ignition coil		

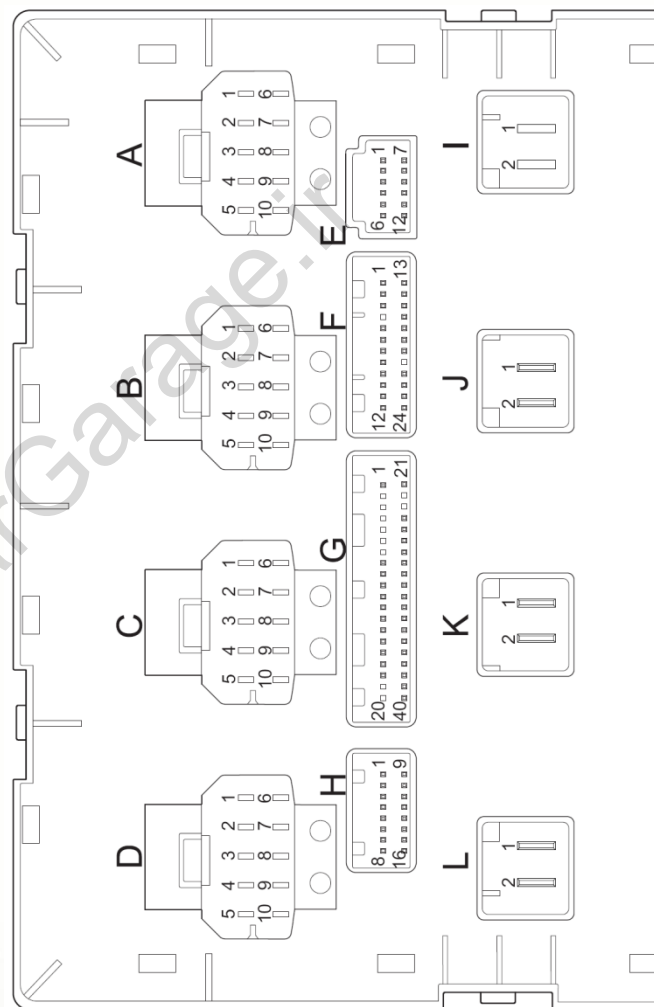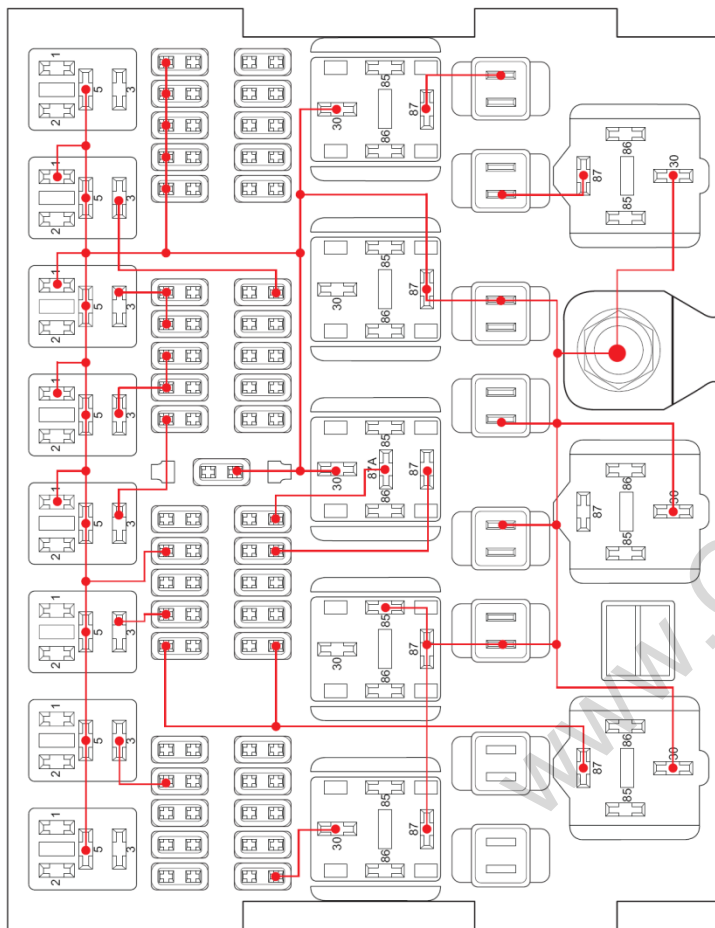

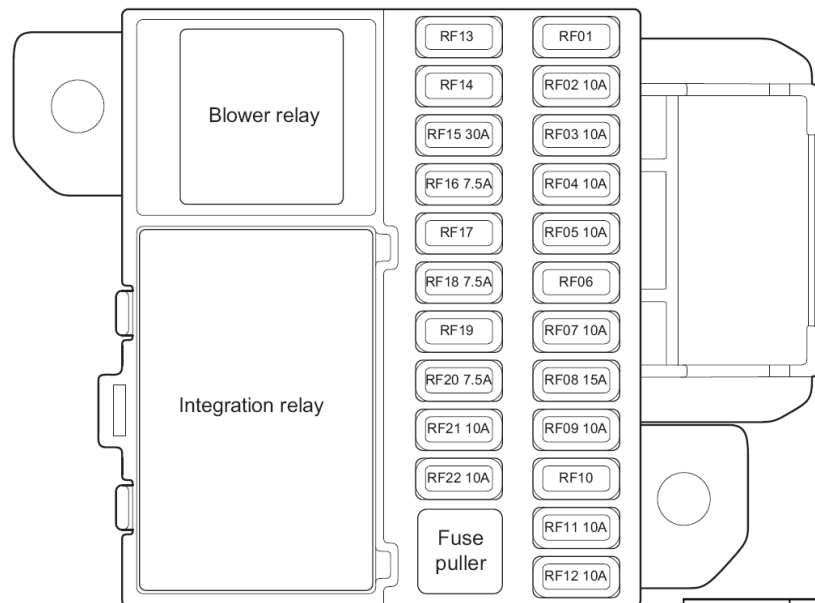

Instrument Panel
Fuse and Relay Box

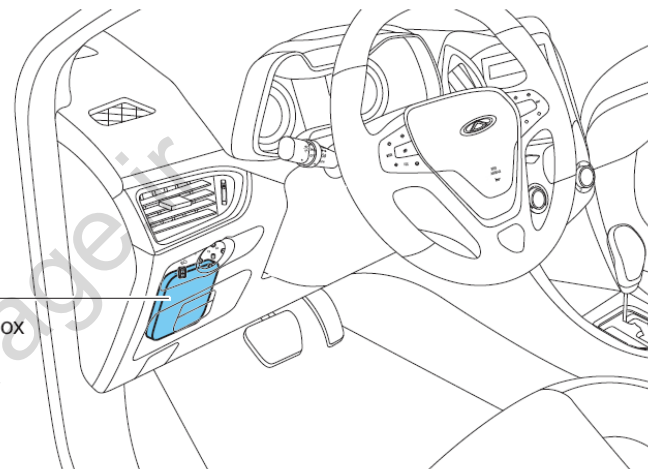

No.	Description	No.	Description	No.	Description
RF01	-	RF09	A/C system/Outside rear view mirror/ Blower relay	RF17	-
RF02	ABS/ESP/SAS	RF10	-	RF18	Rear defroster indicator
RF03	Instrument cluster	RF11	A/C system/Audio system/Headlight leveling dial	RF19	-
RF04	Airbag	RF12	ECM/TCU/PEPS	RF20	Diagnosis interface/Key reminder switch
RF05	BCM	RF13	-	RF21	Instrument cluster
RF06	-	RF14	-	RF22	Audio system
RF07	Audio system/BCM	RF15	Rear defroster		
RF08	Cigarette lighter	RF16	Rear defroster relay		